

INPUT	INPUT OPTIONS
Kick 1-2	<ol style="list-style-type: none"> 1. Dual-zone pad/trigger 2. Use Y-cable for two kick pads/triggers
Snare	<ol style="list-style-type: none"> 1. Dual-zone pad/trigger 2. Use Y-cable for two single-zone pads/triggers
Tom 1-3	<ol style="list-style-type: none"> 1. Dual-zone pad/trigger 2. Use Y-cable for two single-zone pads/triggers
Hi-Hat	<ol style="list-style-type: none"> 1. Single-zone pad/trigger, modified by hi-hat control pedal
Crash	<ol style="list-style-type: none"> 2. Single-zone pad/trigger with choke
Ride 1	<p>Dual-zone pad/trigger with choke</p> <p>Triple-zone pad/trigger with choke in conjunction with Ride 2 input</p> <p>Use Y-cable for two single-zone pads/triggers</p>
Perc 1 / Ride 2	<p>Enables triple-zone with choke on Ride 1</p> <p>Dual-zone pad/trigger</p> <p>Use Y-cable for two single-zone pads/triggers</p>
Perc 2-4	<p>Dual-zone pad/trigger</p> <p>Use Y-cable for two kick pads/triggers</p>